

INSTALLATION GUIDE

Uneekor Launcher

Important: Read before using.



Uneekor Launcher Installation Guide

Specifications

Minimum PC Requirements
• Intel i5 8400
• 8 GB RAM (16 GB RAM for Swing Optix)
• GeForce GTX 1060**
• Windows 10 (64 bit) Version 1803 or higher***
• Integrated ethernet port required
• Internet connection required*

- *PC Sold Separately*
- * Uneekor Launcher requires a consistent internet connection to function
- ** AMD: 3rd gen Ryzen or higher and AMD Ryzen 3600X or higher (AMD 2700 is not compatible)
- *** Not compatible with MacOS

Launcher Download

Please go to our website under resources and click on “Launcher Download” or use the link below.


[Resources Link](#)

Step 1:

Click on Launcher Download under downloads on the top right


Step 2:

On the Setup – Uneekor Launcher 0.8.1.0 pop up window, click on “Next >.”

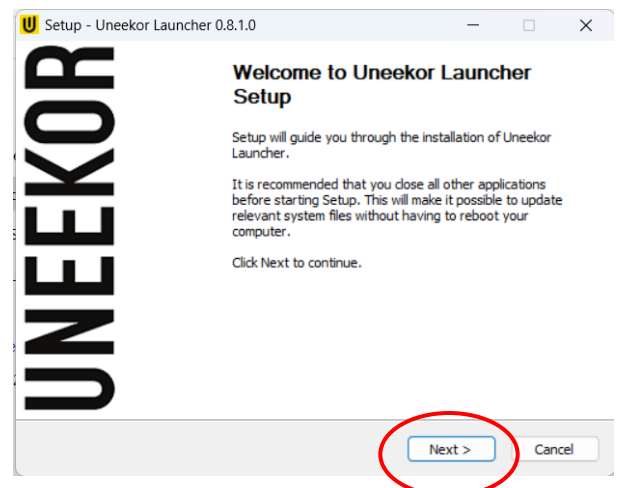

Step 3:


Make sure to select “I accept the terms of the License Agreement,” and click “Next >.”

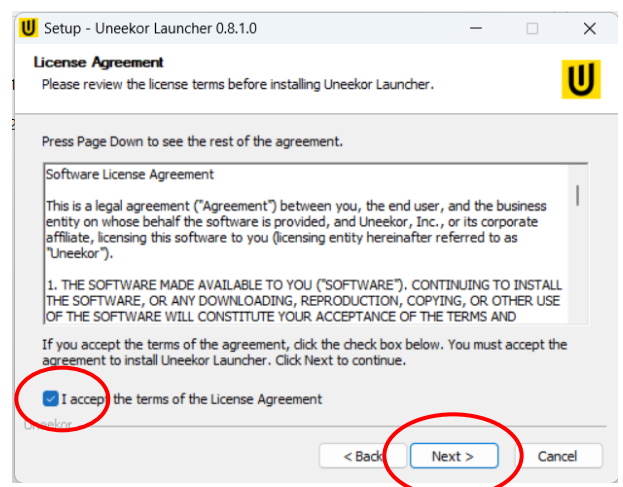

Launcher Download Continued


Step 4:

You can leave the destination folder as “C:\Uneekor\Launcher” or move it to your preferred destination folder. Then click “Install.”

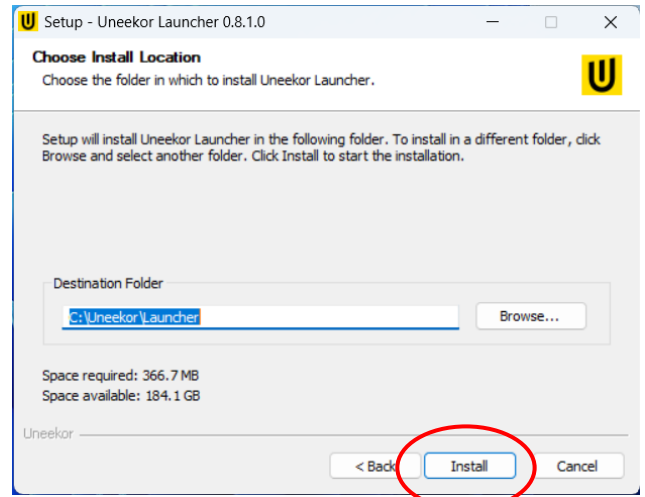

Step 5:

Please wait while the installation is complete and click “Next >.”

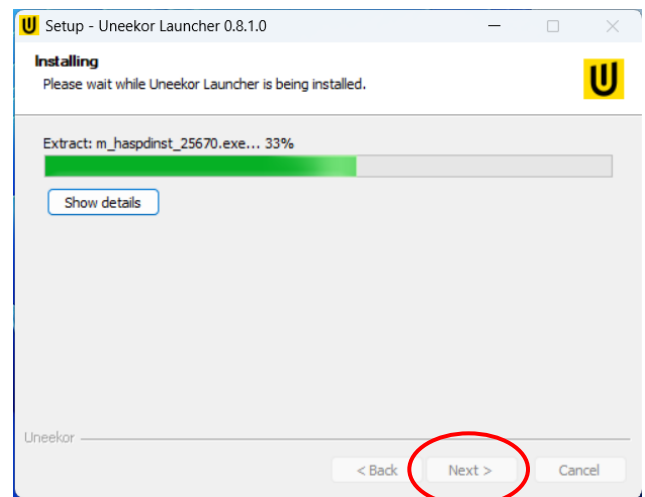


Step 6:

Make sure the “Run Uneekor Launcher” box is checked, and click “Finished”

The launcher download is now complete.

For any questions or issues, please email support at support@uneekor.com or schedule an appointment on our website [here](#)

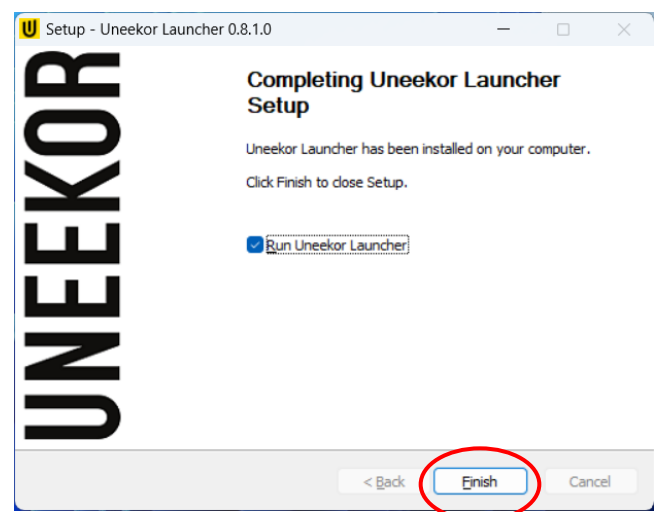

MASTER YOUR PASSION

Uneekor, Inc.

15770 Laguna Canyon Rd
Suite 100 Irvine, Ca
92618

Tel: 1-949-328-7790

sales@uneekor.com

support@uneekor.com

