




Floor Tile and Edging Instructions

1) Orient the Floor Tiles

Each tile has two pointed corners and two arrow-shaped corners. Begin at the front left corner of your space, where the screen will go. **Set the first tile down with an arrow-shaped corner to the left, closest to the screen.**

If you get that first step right, the rest of the floor will be easy as pie.

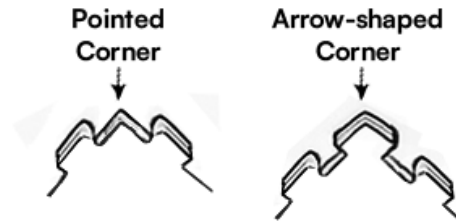

2) Lay the Rest of the Floor Tiles


Lay the rest of your tiles the same way. Don't overthink it - they only fit together one way.

3) Add the Edge Pieces

- Use the standard straight edge pieces (the ones that come with your floor tiles) anywhere you're not using the tall tapered edges.
- Install the tall tapered edge pieces as well - they only go together one way too.

Each edge is also marked with L and R on the back, think of it as:

- L = Length of the room
- R = Row across the front/back

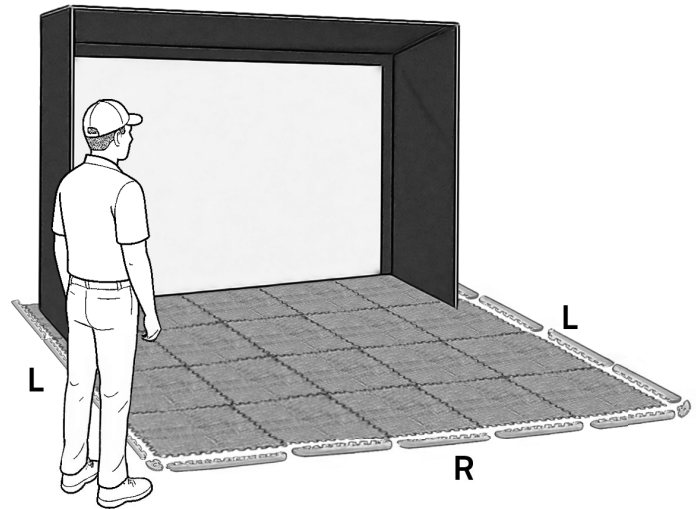

Questions? Send us an email at help@carlofet.com or give us a call at (608) 352-0002.